

TABULKA KOMPATIBILITY PRO DIGITÁLNÍ FOTOAPARÁTY

Canon

Powershot S90 - model 428 / model 418
Powershot A95 - model 418 / model 428
Powershot A480 - model 418 / model 428
Powershot A520 - model 428
Powershot A540 - model 445 / model 448
Powershot A610 - model 445 / model 448
Powershot A640 - model 445 / model 448
Powershot A700 - model 445 / model 448
Powershot A1000 IS - model 418 / model 428
Powershot A1100 IS - model 418 / model 428
Powershot A2000 IS - model 428 / model 418
Powershot A2100 IS - model 418 / model 428
Powershot D10 - model 418
Powershot G9 - model 445 / model 448
Powershot G10 - model 445 / model 448
Powershot SD790 IS - model 428
Powershot SX1 IS - model 455 / model 458
Powershot SX10 IS - model 455 / model 458
Powershot SX110 IS - model 445 / model 448
Powershot SX200 IS - model 445 / model 448
Ixus 95 - model 418 / model 428
Ixus 100 IS - model 418 / model 428
Ixus 110 IS - model 418 / model 428
Ixus 850 IS - model 418 / model 428
Ixus 870 IS - model 418 / model 428
Ixus 980 IS - model 418 / model 428
Ixus 990 IS - model 418 / model 428

Casio

Exilim EX-Z700 - model 428
Exilim EX-Z1000 - model 428
Exilim Z1 - model 408 / model 428
Exilim Z19 - model 408 / model 428
Exilim Z29 - model 408
Exilim Z200 - model 428
Exilim Z250 - model 428
Exilim Z270 - model 408
Exilim Z400 - model 418 / model 428
Exilim F1 - model 455 / model 458
Exilim FH20 - model 455 / model 458
Exilim FC100 - model 408 / model 418

Fuji

Finepix F60fd - model 408 / model 418
Finepix F200 - model 418 / model 428
Finepix J20 - model 408
Finepix J50 - model 418 / model 428
Finepix J250 - model 418 / model 428
Finepix S1500 - model 445 / model 448
Finepix S200HD - model 445 / model 448
Finepix S100fs - model 455 / model 458
Finepix Z30 - model 408
Finepix Z33WP - model 408

GE

A835 - model 408 / model 418
A1030 - model 418
A1050 - model 418 / model 428
A1150 - model 428 / model 418
A1250 - model 418 / model 428
E1250TW - model 428 / model 418
E1255W - model 428 / model 418
G2 - model 408

Kodak

C140 - model 428 / model 418
C180 - model 428
M320 - model 428
M340 - model 428
M380 - model 428 / model 418
M420 - model 428 / model 418
Zi8 - model 408
Z8612 IS - model 445 / model 448
Z1012 - model 445 / model 448
Z1015 - model 445 / model 448

Nikon

Coolpix L12 - model 428 / model 418
Coolpix L19 - model 418 / model 428
Coolpix L20 - model 418
Coolpix L100 - model 445 / model 448 / model 455 / model 458
Coolpix S220 - model 418
Coolpix S550 - model 428
Coolpix S560 - model 428 / model 418
Coolpix S620 - model 428 / model 418
Coolpix S630 - model 418 / model 428
Coolpix S700 - model 428
Coolpix S8000 - model 428
Coolpix P90 - model 455 / model 458
Coolpix S60 - model 408
Coolpix P6000 - model 445 / model 448
P5100 - model 445 / model 448

Olympus

FE35 - model 418 / model 428
FE350 - model 418 / model 428
FE370 - model 428 / model 418
FE3000 - model 418 / model 428
FE5000 - model 418 / model 428
SP590UZ - model 455 / model 458
MJU5000 - model 418 / model 428
MJU7000 - model 418 / model 428
MJU9000 - model 418 / model 428
MJU Tough 6000 - model 408
MJU Tough 8000 - model 408

Panasonic

FS6 - model 418 / model 428
FS7 - model 418 / model 428
FS15 - model 418 / model 428
FS20 - model 418 / model 428
FS25 - model 428
FT1 - model 408
FX37 - model 428
FX40 - model 428
FX550 - model 418 / model 428
FZ28 - model 455 / model 458
FZ30 - model 455 / model 458
GF1 - model 445 / model 448
LS85 - model 418 / model 428
LX3 - model 428 / model 418
TZ5 - model 428 / model 418
TZ6 - model 428 / model 418
TZ7 - model 418 / model 428
ZS-1 - model 428

Pentax

Optio M60 - model 428 / model 418
Optio P70 - model 428 / model 418
Optio W60 - model 408
Pentax 645 - žádný model

Samsung

Digimax S1070 - model 418
Digimax L201 - model 418
ST50 - model 408

Sony

Cybershot W80 - model 428
Cybershot W150 - model 428
Cybershot W170 - model 428
CybershotW210 - model 418
CybershotW220 - model 418
CybershotW270 - model 418
Cybershot W300 - model 418
Cybershot T90 - model 408
Cybershot DSC-T100 - model 408
CybershotT500 - model 418
CybershotT900 - model 408
Cybershot DSC H3 - model 445 / model 448
Cybershot H20 - model 445 / model 448
Cybershot H50 - model 455 / model 458
Cybershot DSC HX1 - model 455 / model 458
Cybershot 930 - model 418
Cybershot S800 - model 428
Cybershot S950 - model 418